



RISEN ENERGY CO., LTD. (DOCUMENT)

## RISEN ENERGY CO., LTD. (DOCUMENT)

# INSTALLATION AND MAINTENANCE MANUAL OF MONO-FACIAL MODULE PRODUCTS

DOCUMENT NO.	RS/03-GT-015-2019	COMPILER	Pei Shichao
EDITION	A/1[2020]	REVIEWER	Zhang Shengcheng
DISTRIBUTION NO.		APPROVER	Liu Yafeng
STATUS	STAMP		

THIS DOCUMENT HAS A TOTAL OF \*34\* PAGES INCLUDING THE FRONT COVER

ISSUE DATE 2020-03-01

IMPLEMENTATION DATE 2020-04-22

2020 . 【10G】



## 1. PURPOSE

This manual provides relevant information on the installation and safe use of PV modules produced by Risen Energy Co., Ltd and Risen Energy (CHANGZHOU) Co., Ltd. (hereinafter referred to as Risen Energy or Risen), and recommends safe and reliable module installation and maintenance instructions for our customers.

Before installation, the installer must read and understand this manual. If you have any questions, please contact sales or customer service staff of Risen for further understanding. When installing, the installer shall comply with all safety precautions and installation laws and regulations in this manual. The installation personnel should be familiar with the mechanical load and electrical requirements of the installation system, and Risen has the right to refuse to compensate for the damage of the modules caused by the operation reasons or design defects of the power generation system.

## 2. SCOPE

This document is applicable to the installation of Risen single-glass modules.

## 3. OBLIGATIONS

Module Technology Department: responsible for the preparation, update and maintenance of this document.

## 4. REFERENCES

NO

## 5. DEFINITIONS

NO

## 6. PROCEDURE

NO

## 7. RELEVANT RECORDS AND SHEETS

See document resume.

## 8. SUPPLEMENTARY PROVISIONS

*The technology department reserve the final right to interpret this document. If there is no controlled seal on the document or any part of it is missing, this document will be invalid. Something that violate the management of documents is prohibited for any department or individual, such as printing, copying, and duplicating the document. If there is any discrepancy caused by translation, the Chinese version shall prevail.*

# CATALOGUE

1	Manual Introduction .....	5
2	Applicable Products .....	5
3	Warning.....	6
4	Safety Cautions .....	6
5	Unloading, Transportation and Storage.....	10
5.1	Markers on outer packaging .....	10
5.2	Unloading cautions.....	11
5.3	Secondary transportation and Warning.....	12
5.4	Storage .....	12
5.5	Markings on module .....	13
6	Unpacking.....	14
7	Installation .....	14
7.1	Environment conditions and site selection .....	14
7.2	Tilt angle of Installation .....	16
8	Installation Guidelines .....	17
8.1	Bolt Method.....	17
8.2	Clamping Method.....	21
8.3	Tracking system .....	23
9	Recommended installation of module with split J-Box.....	25
10	Electrical Connection .....	26
10.1	Bypass secondary.....	29
11	Grounding .....	29
12	Inspection and Maintenance .....	31
12.1	Module visual inspection and replacement.....	31
12.2	Cleaning.....	32
13	Troubleshooting .....	33
14	DISCLAIMER.....	34

## 1 Manual Introduction

Thanks for choosing Solar PV modules from Risen Energy Co., Ltd (hereinafter called Risen).

In order to ensure that the PV modules are installed correctly, please read the following installation manual carefully before modules are installed and used. Please let the well trained professional to engage the PV module's installation, running and maintenance due to these works are based on the professional knowledge. The personnel for the installation should be familiar with the mechanical and electrical requirements. Please get contact with Risen After-service Department ([afterservice@risenenergy.com](mailto:afterservice@risenenergy.com)) or Risen local agency if you want to get more details or there is any question.

## 2 Applicable Products

Risen's photovoltaic solar module is a DC power supply, which has the character of high reliability and nearly no-maintenance. It can be used in power systems of remote areas, home power systems, renewable energy vehicles, hydropower stations, water pumps, communication system or constitute solar photovoltaic power station directly. These systems not only can be used by battery, but also can be used by grid-connection directly without battery.

This document is applicable to the following PV Solar Modules types:

Monofacial modules	RSM60-6-xxxP/M	RSM72-6-xxxP/M	RSM120-6-xxxP/M	RSM144-6-xxxP/M (M2、G1)
	RSM132-6-xxxP/M	RSM156-6-xxxP/M	RSM120-7-xxxP/M	RSM144-7-xxxP/M
	RSM156-7-xxxP/M	RSM150-8-xxxP/M		
HJT-Monofacial modules	RSM60-6-xxxMH	RSM72-6-xxxMH	RSM120-6-xxxMH	RSM144-6-xxxMH (M2、G1)
	RSM132-6-xxxMH	RSM156-6-xxxMH	RSM120-7-xxxMH	RSM144-7-xxxMH
	RSM156-7-xxxMH			
Shingled modules	RSM68-6-xxxMS	RSM81-6-xxxMS		
Monofacial modules-double glass	RSM60-6-xxx P/MDG	RSM72-6-xxx P/MDG	RSM120-6-xxxP/MDG	RSM132-6-xxxP/MDG
	RSM144-6-xxxP/MDG (M2、G1)	RSM156-6-XxxP/MDG	RSM120-7-xxxP/MDG	RSM144-7-xxxP/MDG
	RSM156-7-xxxP/MDG			
HJT-Monofacial modules-double glass	RSM60-6-xxx HDG	RSM72-6-xxx HDG	RSM120-6-xxx HDG	RSM144-6-xxx HDG (M2、G1)
	RSM132-6-xxxHDG	RSM156-6-xxxHDG	RSM120-7-xxxHDG	RSM144-7-xxxHDG
	RSM156-7-xxxHDG			

The detail parameter can be get from the official module datasheet from our website ([www.risenenergy.com](http://www.risenenergy.com))

The Solar PV modules described in this manual are terrestrial used only, cannot be used in space. The high altitude influence to module operation should be considered when the modules are installed in high altitude area.

### 3 Warning

Please read and understand all the safety cautions before the PV module installation, wiring, operation and maintenance. When exposed to the sun light or other light sources directly, the PV modules will generate the Direct Current, there will be the risk to cause people death when touching the electrical part like the connectors/terminals no matter whether the modules are connected or not.

 <p><b>WARNING</b></p>	<p>Maximum series fuse rating 20A            Power production tolerance <math>\pm 3\%</math>            This module produces electricity when exposed to light.            Follow all applicable safety precautions.            Only qualified personnel should install or perform maintenance work on these modules            Be aware of dangerous high DC voltage when connecting modules.            Do not damage or scratch the rear surface of the modules.            Do not handle or install modules when they are wet.            Follow the battery manufacturer's recommendations if batteries are used with modules.</p>
--	---

### 4 Safety Cautions

- In the installation and maintenance, all the Safety Cautions mentioned in this manuals should be followed, in the meantime, all the requirements defined by local law, authority agency or government should be followed. Failed to follow this manual or the above rules/law will cause the fail of our Limited Warranty to the modules.
- Please get contact with local authority agency to confirm if the installation is legally allowed and meets the installation inspection requirements before installing the PV system.
- When designing the PV system, please be sure to consider about the voltage change under different temperatures (please check the temperature coefficients of all PV modules, when the temperature drops, the variable output voltage of the module will rise).
- The shading on the module surface will affect the power generation much, the module should be installed in the place where the module cannot be shadowed totally (such as the shadow



from building, chimney and tree etc.), and even the partially shading (such as the dirt, snow and aerial wire etc.) should be avoided.

- The modules should be kept inside the original packaging before installation. In the transportation and storage period, please do NOT damage the packaging. The packaging cannot be opened unless at the installation site. It is recommended to open the packaging according to the opening procedure and handle this procedure carefully. It is forbidden to let the packaged module dropped directly.
- Please ensure the correct and proper method of transportation and installation, otherwise it could cause the module damage.
- The maximum limit of the stack layer is defined in the outer packaging carton box, please do NOT stack the modules more than this limit. Before opening the packaging, Please keep it in a ventilated, rainproof and dry place.
- It is prohibited to stand, climb, walk and jump on the unpacked packaging.
- To avoid damaging the module and to avoid affecting the module safety, please never put any heavy or sharp objects on the front and rear surface of the module at any time.
- When open the packing box, please use the professional and proper tools which can avoid the inclining and dropping of the module. It is forbidden to put the module in a place without any supports or fixtures.
- Never handle and move the module via the cable or the J-Box at any time. At least 2 personnel with non-slip gloves are required to handle one module at the same time. Do NOT carry the module via overhead and do NOT handle the stacked modules for moving.
- Please store the modules in a ventilated, rainproof and dry place when the temporary storage is needed.
- Please ensure all the modules and electrical contact parts are clean and dry in the installation.
- Do NOT install any module when it is raining, snowing and strong windy.
- Artificially concentrated sunlight shall NOT be directed on the module.

- Use durable, rust-resistant and UV-resistant materials to fabricate the module bracket structures which have been tested, certified and approved.
- When the modules were installed on the brackets, the brackets structure should have the ability to bear the wind load and snow load at site. And please ensure these load will not exceed the maximum load design of the module.
- The modules with the glass broken or the back-sheet damage cannot be repaired and CANNOT be used, there will be the electrical shock risk in case to touch the surface or frame of these kind of modules. Do NOT try to disassemble the module, and do NOT remove or damage the module nameplate and any other parts of the module.
- It is FORBIDDEN to stand on the modules in the installation progress, and do NOT damage or scratch the glass surface of the module.
- Do NOT apply any paint or glue to the module glass surface.
- The Solar PV modules will generate the electrical power when exposed to the sunlight, and this power is sufficient to cause fatal electrical shock and burning risk. Only the authorized personnel who is professional trained can close to the solar PV module.
- To avoid the electrical shock and burning risk, the opaque material can be used to cover the modules in the installation.
- To avoid the electrical shock risk by damaged module, please do NOT wear metal objects such as ring, watch, ear ring and nose ring in the term of the installation and maintenance.
- Do NOT disconnect any electrical connections or unplug any connectors under circuit load.
- In order to prevent the degradation of the module insulation ability, please avoid scratching and cutting any cables or connectors.
- Use well insulated tools in accordance with relevant electrical installation standards. Keep children away from the installation site during transportation and assembly.
- Installation shall comply with local safety regulations (e.g., safety regulations, plant operation regulations), including wires and cables, connectors, charging controllers, inverters, batteries, rechargeable batteries, etc.

- Under the requirements of the NEC (National Electrical Code), the maximum system voltage shall not be higher than 1000V or 1500V. And the actual system voltage is specified on the nameplate of the module you are using.
- Under normal conditions, a mono-facial dual glass PV module is likely to experience conditions that produce more current and/ or voltage than reported at standard test conditions. The requirements of the National Electrical Code (NEC) in Article 690 shall be followed to address these increased outputs. In installations not under the requirements of the NEC, the values of  $I_{sc}$  and  $V_{oc}$  marked on this module should be multiplied by a factor of 1.25 when determining module voltage ratings, conductor ampacities, overcurrent device ratings, and size of controls connected to the PV output; for bifacial dual glass module, additional factor of 1.1 should be multiplied at the same time.
- Risen Solar PV module is designed according to the IEC61215 and IEC61730, The application level is Class A, which can be used in systems operating at greater than 50 V DC or 240 W, where general contact access is anticipated, and Risen module also passed the IEC61730-1 and IEC61730-2, it meets the requirements of safety class II.
- Comply with electrical specification - part 1- electrical equipment safety standard CSA C22.1-12-2012.
- Modules with exposed conductive parts shall be grounded in accordance with the instructions in the installation manual and the requirements of the National Electrical Code of the United States, otherwise it will be considered as a violation of UL 1703.
- Please consult with local authorities for the requirements on installation methods and fire safety of buildings.
- Assess the fire rating of the system according to the condition of the roof and mounting brackets, subject to local electrical safety regulations. A suitable layer of fireproof material for this class shall be covered and the ventilation should be maintained.
- The difference of the roof structure and installation method will affect the fire safety performance, and unappropriated installation will take the risk to cause the fire. In order to ensure the fire rating of the roof, the minimum distance between the module frame and the

roof surface is 115mm, and appropriate modules such as fuses, circuit breakers and ground connectors should be used according to local electrical safety regulations.
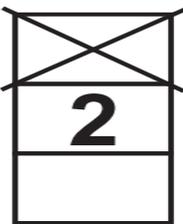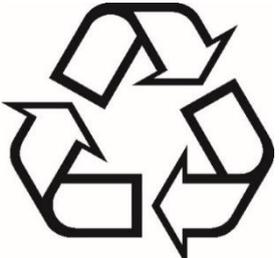
<p>Discarded at will of the module is forbidden and require special recycling.</p> 	<p>Modules shall be kept dry, NOT exposing to the rain or moisture.</p> 	<p>Modules in carton are fragile, which shall be handled with care.</p> 
<p>Do not exceed the maximum number of layers of the logo printed on the outer box when stacking modules.</p> 	<p>The packaging shall be transported upright.</p> 	<p>The packaging material can be recycled.</p> 


- Observe the safety precautions of the module installation manual. If the modules are installed on the roof, ensure that the roof structure is reasonable. In addition, the installation of any roof modules must be sealed to prevent leakage and to ensure the fire rating levels. The accumulation of dust on the modules surface will impair the performance of the modules. During the installation, the module tilt angle should be maintained at more than 10° to allow the rain to wash away the dust, while the module with too small tilt angle requires more frequent cleaning.
- Please do NOT operate any devices at the place where is closed to the flammable gas.

## 5 Unloading, Transportation and Storage


### 5.1 Markers on outer packaging

## 5.2 Unloading cautions


Use a suitable lifting fixture to handle, no more than 2 pallets of modules. Before lifting, check whether the tray and the carton are damaged and whether the hoisting ropes are strong and firm. Two people shall support at the two sides of the righting carton gently to place it on the relatively flat position of the project site.

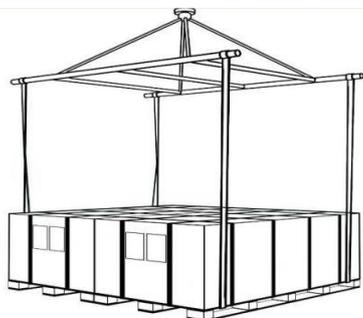


Use a forklift to remove the unit from the truck.

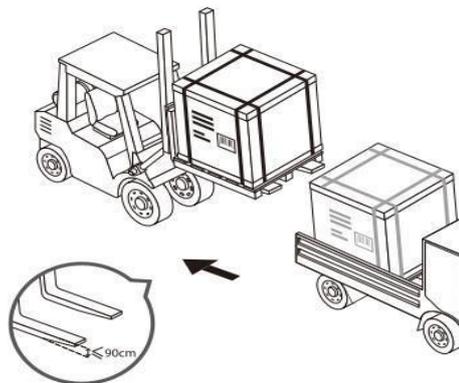


The stacking of modules at the project site is prohibited.

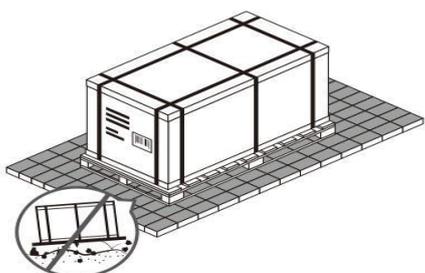

Place the modules on a level surface.

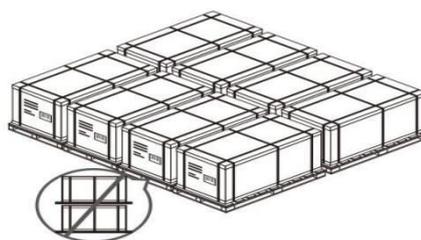

Place the unit in a dry and ventilated place.

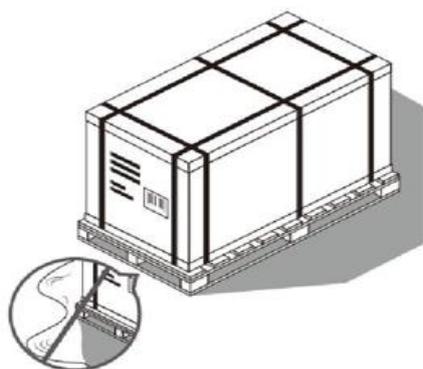


Cover the modules with a tarpaulin to prevent the package from getting wet.




### 5.3 Secondary transportation and Warning

Do NOT remove the original packages if the modules require long-distance transport or long-term storage.

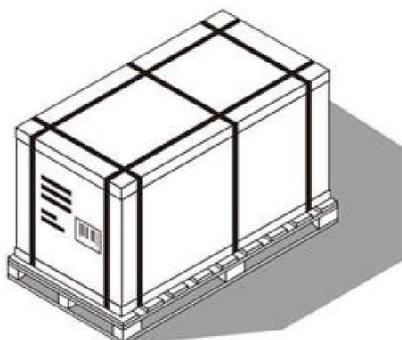


Packaged products can be shipped by land, sea, or air. During transportation, please fix the packing box on the transport platform to ensure that the packing will not roll over. No more than 2 layers by truck normally.

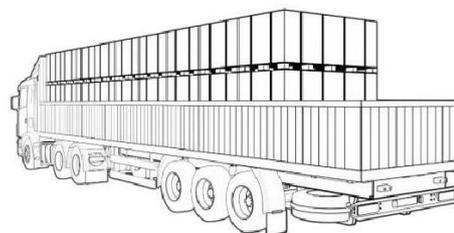

No Transportation or handling by pedi-cab as the following.



No handling the module with rope as the following.

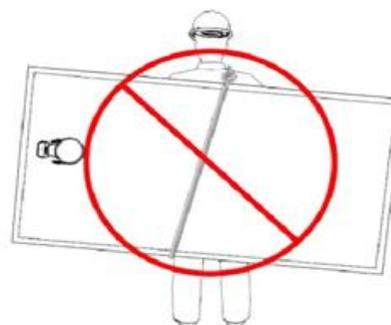

No carrying the module on the back of person



### 5.4 Storage

- Do NOT expose the modules to rain or moisture. Store the finished product in a ventilated, waterproof and dry place.

- Do NOT remove the original packaging if the module requires long-distance transport or long-term storage.
- Modules Stacking no more than 1 layers (moisture < 85%RH, temperature in the range from -40°C to + 50 °C) , see Fig. 5-1.

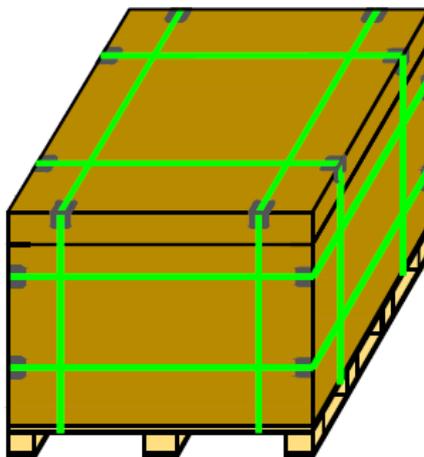


Fig. 5-1 temporary storage at site warehouse

### 5.5 Markings on module

Three markings are attached on the module with following information:

- Nameplate: module type, nominal power, rated current, rated voltage, Voc, Isc, certification logo and maximum system voltage, etc.
- Current marking: the classification according to the module's current.

To provide clear information of modules for customers to perform efficient installation, modules will be sorted according to four current classifications, which are as follow:

I1: Current Classification 1    I2: Current Classification 2

I3: Current Classification 3    I4: Current Classification 4

- B: Unique bar code for each module. The bar code used by Risen includes 14 digits or letters, and details are as follow. Set the YYMMDDABBCCCCC as the example:
  - ✓ From the 1<sup>st</sup> to the 6<sup>th</sup> digits: YYMMDD means the manufacturing date;
  - ✓ The 7<sup>th</sup> letter: A means Code for internal identification;
  - ✓ The 8<sup>th</sup> and 9<sup>th</sup> digits: BB means the manufacturing workshop;
  - ✓ From the 10<sup>th</sup> to the 14<sup>th</sup> digits: CCCCC means the serial number of production.

## 6 Unpacking

- As for outdoors unpacking, it is prohibited to operate in rainy conditions. Because the carton will become soft and damaged after it gets wet in the rain. The PV modules (hereinafter referred to as "modules") inside the carton will incline, which may cause damage or injury to personnel.
- If there is wind at site, it is necessary to pay special attention to safety, especially in strong wind conditions, and it is NOT recommended to transport the modules at this situation. The unpacked modules shall be fixed properly.
- The ground should be flat where unpack the packaging, this will ensure that the carton can be placed stably and to avoid incline.
- Wear protective gloves during unpacking to avoid hand injury and finger prints on the glass surface.
- Module information and unpacking instructions can be found on the outer package. Please read the instructions before unpacking.
- Each module shall be handled by two personnel. It is forbidden to pull the wires or junction boxes of the modules to carry the module.

## 7 Installation

### 7.1 Environment conditions and site selection

Risen module should be installed in the following environmental conditions.

Table 7-1 operation condition

NO.	Environmental conditions	Range
1	Recommended Working temperature	-20° C to+50° C.
2	Extreme Working temperature	-40° C to +85° C
3	Storage temperature	-20°C to +50°C
4	Humidity	<85 RH%


Remarks: The working environment temperature is the monthly average maximum temperature and

minimum temperature of the installation site. The mechanical load bearing capacity of the solar PV module is determined based on the installation method. The professional solar PV system installer must be responsible for calculating the solar PV system machinery when designing the solar PV system load bearing capacity.

- If the module will be installed in a place of which the humidity is more than 85RH%, please get contact with Risen After-service team ([afterservice@risenenergy.com](mailto:afterservice@risenenergy.com)) for the properly installation method, or check whether the module can be installed or not.
- For most places, Risen solar PV modules should be installed where the sunlight can be maximally acquired throughout the year. In the Northern hemisphere, the light-receiving surface of the module is usually selected to face the South; in the Southern hemisphere, the light-receiving surface of the module is usually selected to face the North.
- When selecting the installation location, avoid areas with trees, buildings, or obstacles because these objects will form shadows on solar PV modules, especially when the sun is at the lowest position on the horizon in winter. The shadow will cause the loss of the output power of the solar photovoltaic system. Although the bypass diode installed in the solar photovoltaic module can reduce this loss to some extent, do not ignore the shadow factor.
- Do not install solar PV modules near fire or flammable materials. Do not install solar PV modules where there is water soaking, sprinkler or water spray.
- According to IEC 61701, salt mist corrosion testing of photovoltaic (PV) modules, Risen Solar modules can be installed in corrosive salt areas within proximity of the ocean or sulfurous areas. The module must not be soaked in the water or be installed in the environment (i.e., fountain, spindrift, etc.) where the module would touch water (pure water or brine) for a long term. If the modules are placed in an environment of salt fog (i.e., marine environment) or sulfur (i.e., sulfur sources, volcanoes, etc.), there is a risk of corrosion.
- According to the test result of IEC62716:2013 “Ammonia corrosion testing of photovoltaic (PV) modules” for ammonia resistance, Risen Solar modules can be safely installed in ammonia-heavy environments, such as farm, meadow and so on. I

## 7.2 Tilt angle of Installation

- The installation of solar PV module string should be in the same orientation and the same installation angle. Different installation directions and installation angles will lead to the mismatches in current and voltage which is caused by different light absorption of different solar modules, this mismatch will cause the PV system power output loss.
- The largest power will be generated When direct sunlight on solar PV module. For modules which are installed on the fixed brackets, the best installation angle should be selected to ensure the maximum power output can be generated at winter time, if the angle can guarantee enough power output during the winter, it will make the whole solar PV system in the rest of the year can have enough power output also.
- The tilt angle measurement of the PV module refers to measuring the angle between the module and the horizontal ground surface. For different projects there are different mounting angles. Be in accordance with local regulations or follow the recommendations of experienced PV module installers.

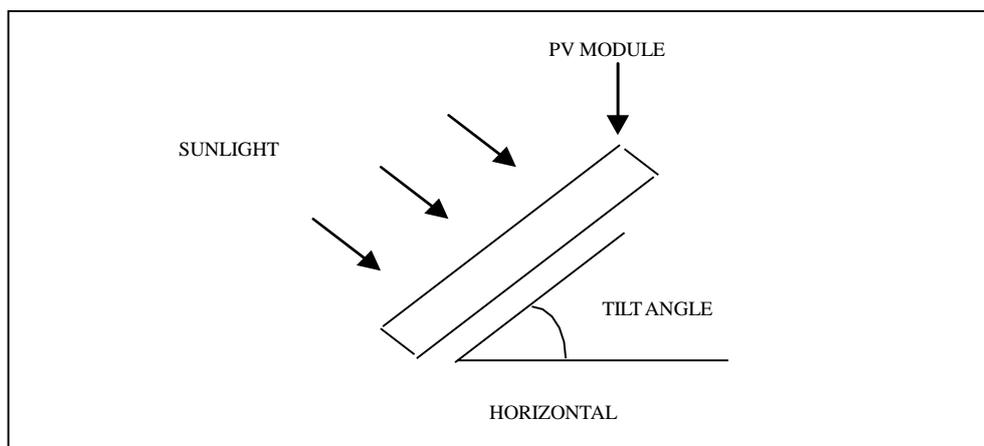

**Fig. 7-1 Tilt angle**

**Table 7-2 Recommended tilt angle for fixed systems**

latitude	Fixed angle of inclination
0°~15°	15°
15°~25°	The same latitude
25°~30°	Same latitude +5°
30°~35°	Same latitude +10°

35°~40°	Same latitude +15°
40°+	Same latitude +20°

## 8 Installation Guidelines

Risen modules can be installed through bolt method and clamp method.

Please ensure the following points no matter which method is used.

- ✓ Please ensure that the modules with the same color cells to be installed together.
- ✓ The minimum clearance between module frame and wall or roof should be ensure 115 mm at least.
- ✓ The minimum clearance between two adjacent modules must not be less than 20mm.
- ✓ The module frame drain holes cannot be blocked in any situation during installation or use.
- ✓ Modules shall not be subjected to wind or snow loads which is exceeding the maximum permissible designed loads, and shall not be subjected to excessive forces due to the thermal expansion of the support structures. The selection and design of mounting bracket shall be carried out by professional system engineers after the load calculation according to the climatic conditions of the installation site.

The installation method listed below are for your reference only, the PV system installer or the trained professionals should take the responsibility of the PV system design, mechanical load calculation, install, maintenance and safety, Risen will not supply the related material for system installation.

Tools: screwdriver, wrench, stainless steel screw/bolt, clamp, nut and spring washer, plain washer.

### 8.1 Bolt Method

- Use anti-corrosion M8 stainless steel bolts to fix the solar photovoltaic module through the mounting hole on the frame of the solar photovoltaic module (as shown in Figure 8-1 ).Risen recommends that you erect solar photovoltaic modules when fixing bolts, so that the modules will not slide easily and it will be safer to use.

- The aluminum frame of each solar photo voltaic module has 8 mounting holes or 4 mounting holes. Under the mounting position shown in table 8-1, the static load that the front side of the module can bear is 5400 pa and the reverse side is 2400pa
- Solar PV modules can be fixed to the bracket system via M8 corrosion-resistant bolts and matching nuts together with spring washers and plain washers by 16N•m-20 N•m applied torque. Please refer to the installation diagram below for details. M6 applied torque is 14N•m-18 N•m


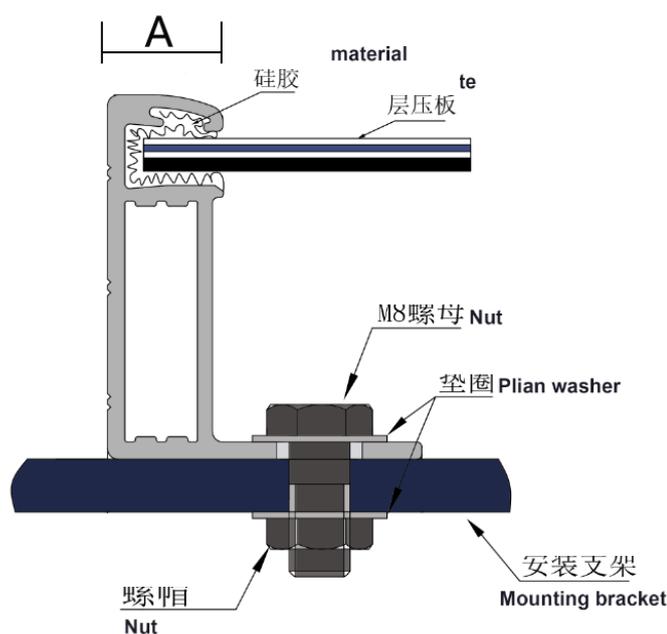


Fig. 8-1 Drawing of installation dimension

Table 8-1 Installation method of outer 4 holes

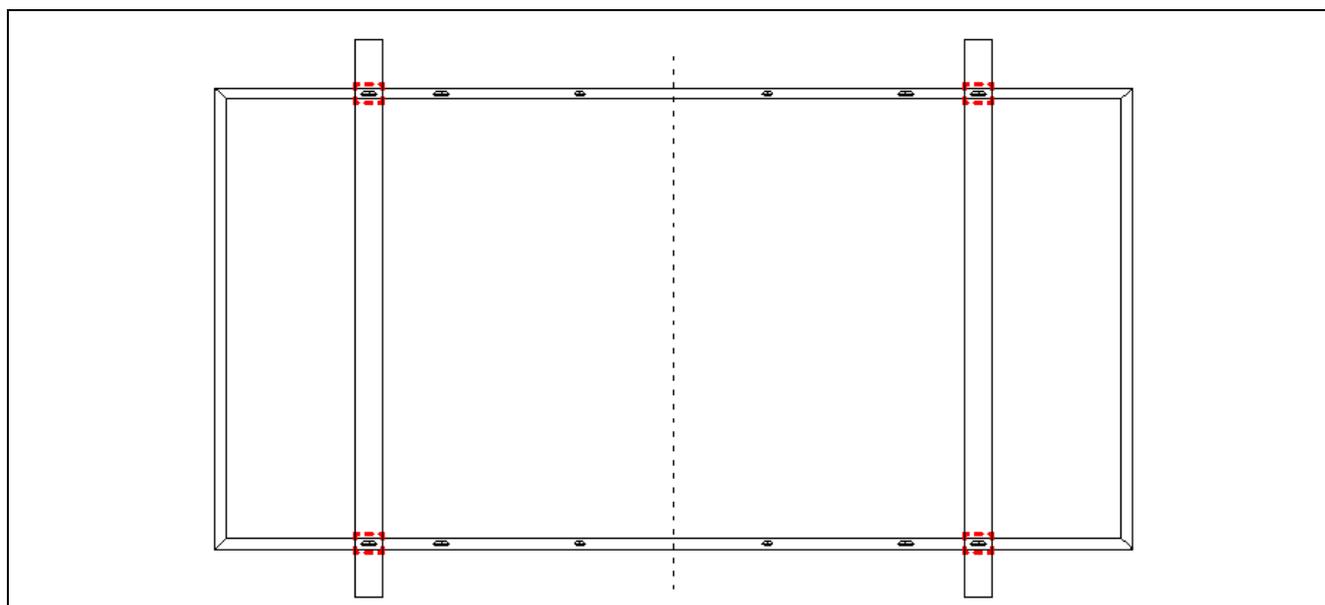

Module model	Load
RSM60-6 RSM120-6、RSM120-7 RSM132-6	front load $\leq$ 5400pa back load $\leq$ 2400pa
RSM72-6 RSM144-6 (M2、G1)、RSM144-7	front load $\leq$ 3600pa back load $\leq$ 2400pa
RSM156-6、RSM156-7 RSM150-8	front load $\leq$ 5400pa back load $\leq$ 2400pa

Table8-2 Installation method of inner 4 holes




	
Module model	Load
RSM60-6 RSM120-6、RSM120-7 RSM132-6	front load $\leq$ 5400pa back load $\leq$ 2400pa
RSM72-6 RSM144-6 (M2、G1)、RSM144-7	front load $\leq$ 3600pa back load $\leq$ 2400pa
RSM156-6、RSM156-7 RSM150-8	front load $\leq$ 5400pa back load $\leq$ 2400pa

Table 8-3 Installation method of 400mm spacing hole



Module model	Load
RSM72-6 RSM144-6 (M2、G1)	front load $\leq$ 2400pa back load $\leq$ 2400pa
RSM156-6、RSM156-7 RSM150-8	front load $\leq$ 2400pa back load $\leq$ 2400pa
RSM144-7	front load $\leq$ 1800pa back load $\leq$ 1800pa

Table8-4 8 holes installation

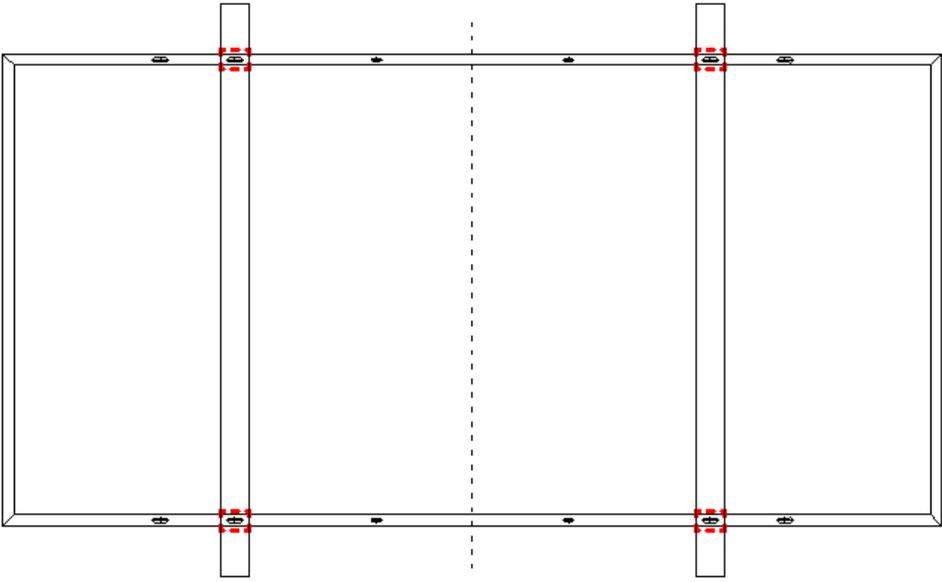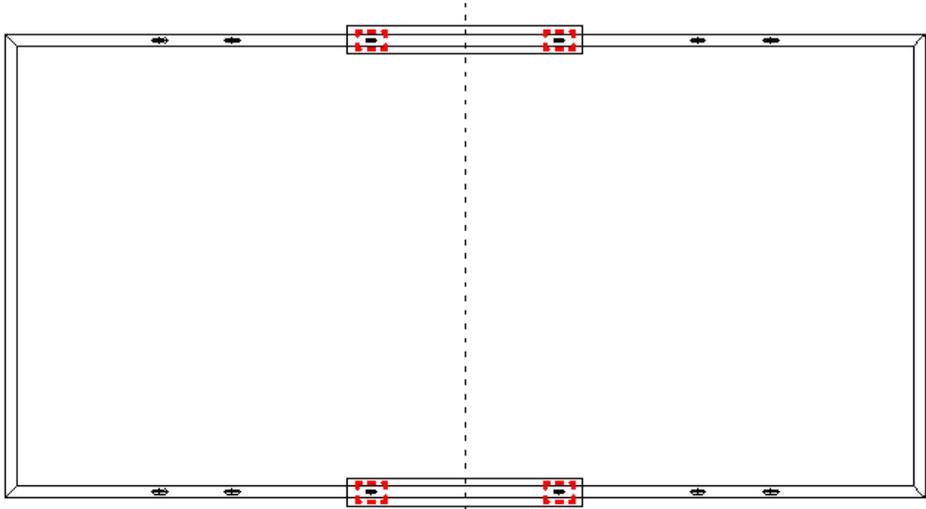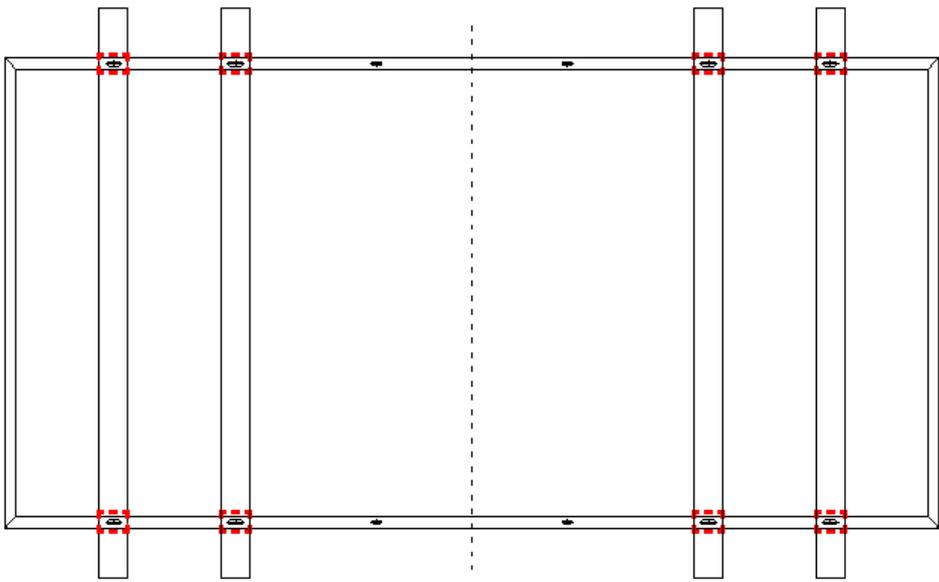

Module model	Load
--------------	------



RSM72-6 RSM144-6 (M2、G1)、RSM144-7	front load≤5400pa    back load≤2400pa
--------------------------------------	---------------------------------------

## 8.2 Clamping Method

- Clamping method: Fix the length and width of the solar PV modules with suitable clamps. To be securer and less prone to slippage, when mounting with clamps, Risen recommends that you lay the modules horizontally.
- Use a certain number of press blocks and M8 nuts to fix the solar PV module to the mounting bracket. Don't let the blocks contact the glass, make the aluminous frame out of shape or make any shadow to PV module. If choose this installation method for press blocks, it will be use 4 press blocks to fix each PV module at least. According to the actual load of local wind and snow, it may add much more number of press block to make sure PV module and system can bear corresponding load. One or two blocks can be added to each mounting border. The additional blocks can be installed in the middle of the previous two blocks. Or it can be reinforced with mounting holes or increased the length of the block.


The application of torque for M8 is 16N·m-20 N·m, for M6 is 14N·m-18 N·m.

Table 8-5 Information of clamp

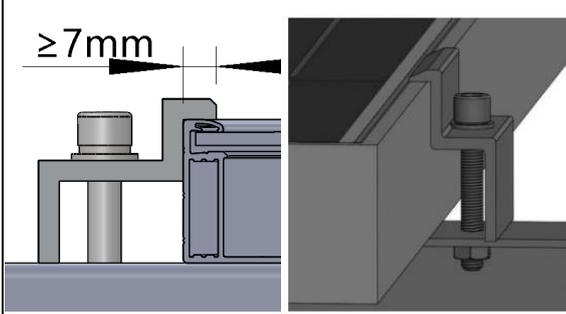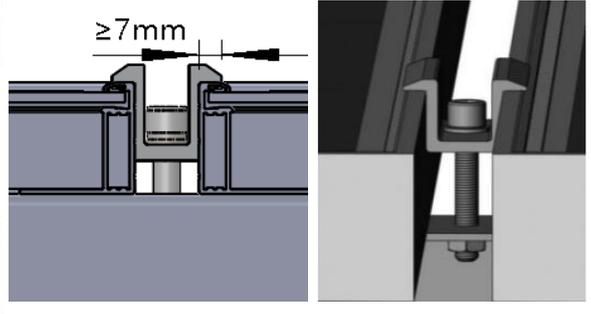
Clamp type	Mounting clamps for bifacial framed PV module	
	Side clamp	Middle clamp
Sketch map		

	<b>Note: ensure the clamp to contact the side A of the module frame for more than 7mm, and avoid it blocking the front of the photovoltaic module.</b>	
<b>Clamp length</b>	length $\geq 50\text{mm}$	length $\geq 50\text{mm}$
<b>Parts</b>	M8 bolt、nut、spring washer、flat washer	

**Table8-6 Installation manual for short side of clamp**

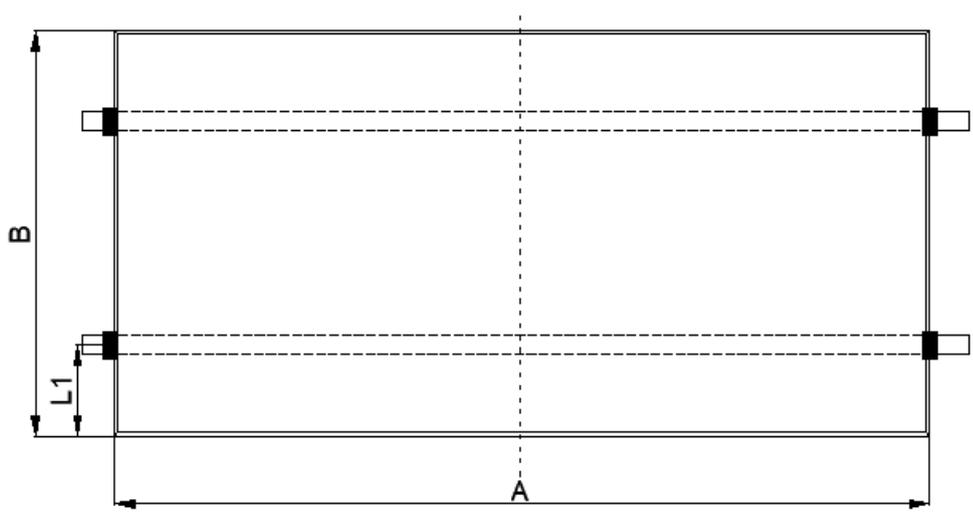		
<b>Module model</b>	<b>L1</b>	<b>Load</b>
RSM60-6 RSM120-6、RSM120-7 RSM132-6 RSM72-6 RSM144-6 (M2、G1)、RSM144-7	$1/5B \leq L1 \leq 1/4B$	front load $\leq 2400\text{pa}$ back load $\leq 2400\text{pa}$

**Table8-7 Installation manual for long side of clamp**

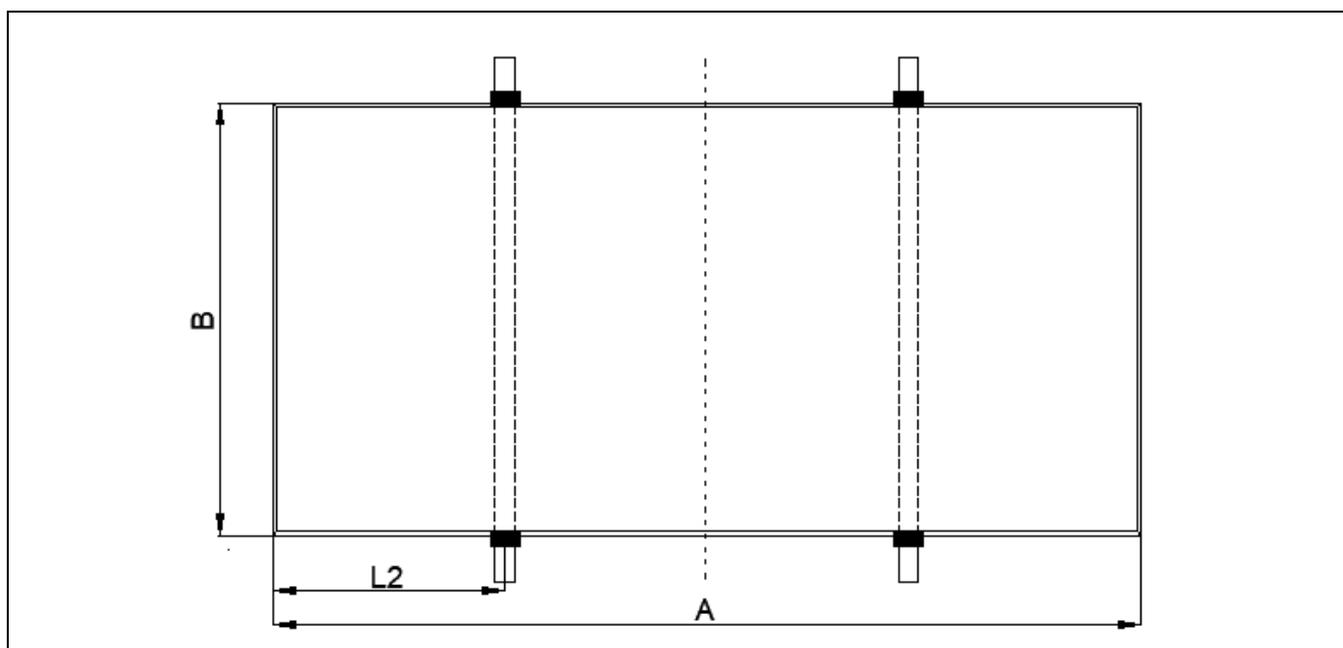



Module model	L2	Load
RSM60-6 RSM120-6、RSM120-7 RSM132-6 RSM72-6 RSM144-6 (M2、G1)、RSM144-7 RSM156-6、RSM156-7 RSM150-8	$1/5A \leq L2 \leq 1/4A$	front load $\leq 5400\text{pa}$  back load $\leq 2400\text{pa}$

In the above installation method, the long side installation is recommended by Risen. Other installation methods unlisted above need to be confirmed with Risen professional team. System installer or trained professionals must be responsible for the design, mechanical load calculation, installation and maintenance of photovoltaic systems.

### 8.3 Tracking system

Risen module can be used on the tracking system. The installation position of hole and clamp shall be selected according to the design of the support system. The mechanical load of tracking system is the same as the corresponding values of the fixed mounting. Please refer to section 8.1 and 8.2 for details.

The tracking system includes horizontal single-axis tracker, horizontal single-axis tracker with tilted module, tilted single-axis tracker, two-axis tracker, etc. This manual only lists some common installation methods of horizontal single-axis tracker.

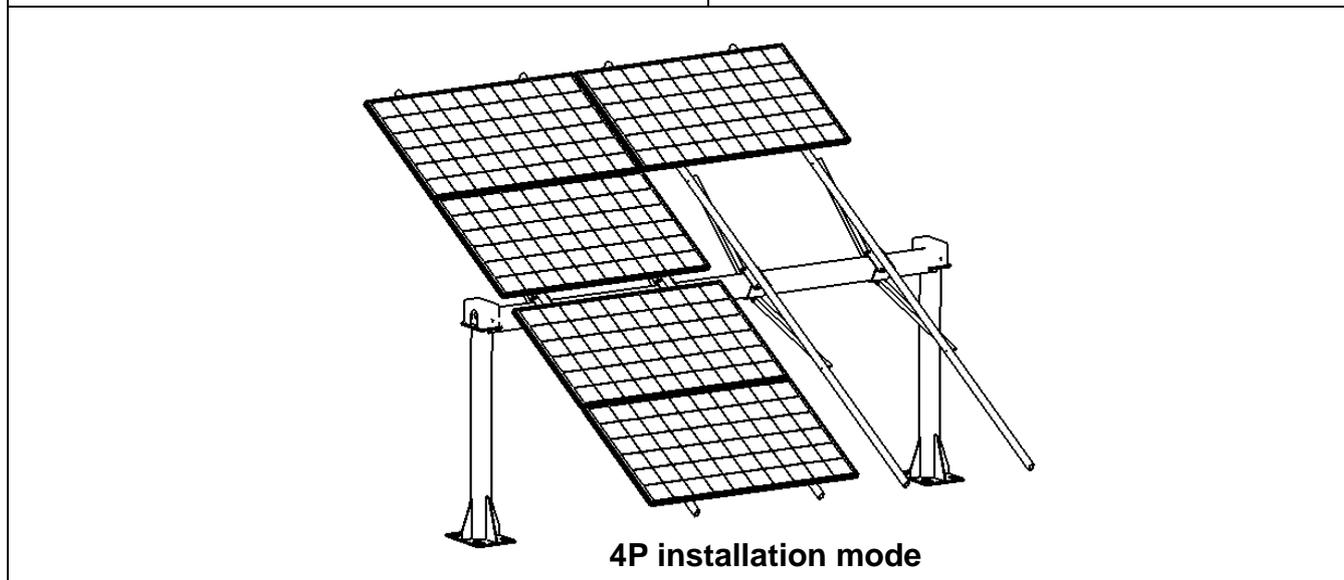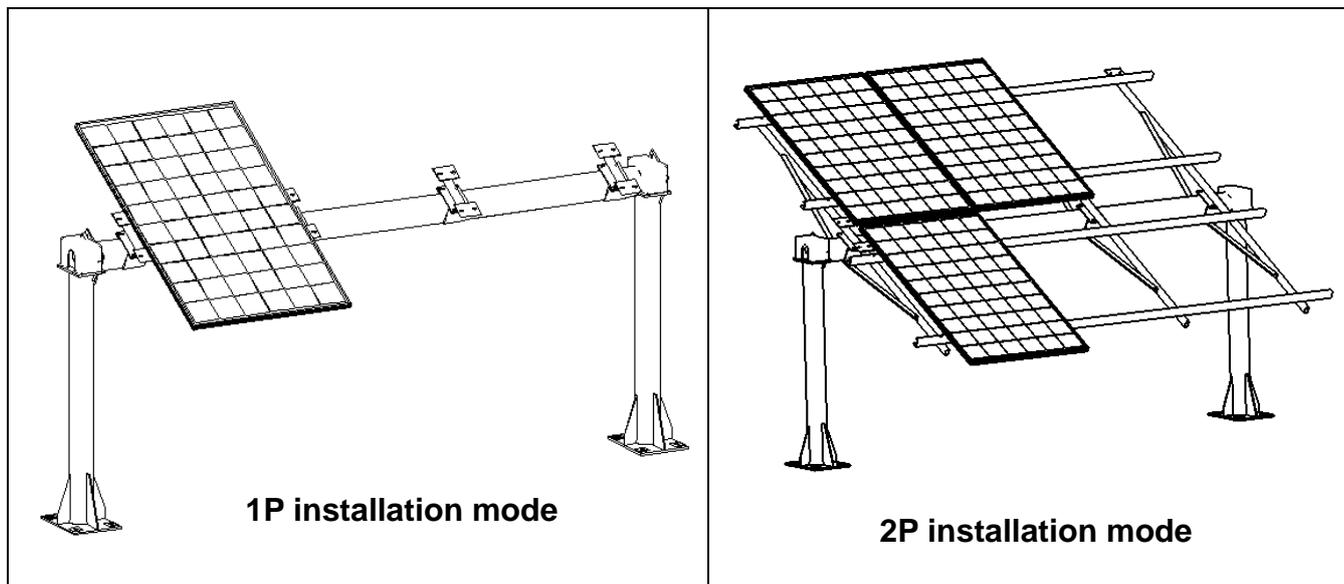

Risen module can be installed and used on the tracking system, and the installation hole position or clamp position shall be selected according to the design of the support system. Please refer to section 8.1 and 8.2 for details,

The system installer or professional designer shall recheck the bearing capacity of the support system (photovoltaic support, foundation, etc.) according to the selected installation hole position or pressing block position.

For horizontal single-axis installation, parameters such as axis shape, axis size, distance between module and axis shall be considered to avoid shading the back side of bifacial


module. The distance between the C-side of the frame and the axis is recommended  $\geq$  30mm, when 1P installation method is used.

### 9 Recommended installation of module with split J-Box


Cable Length: conventional 60/72 whole assembly cable length positive pole 1200mm negative pole 1200mm

Conventional 120/132/144/156 half-piece assembly cable length positive pole 270mm negative pole 270mm


The recommended vertical installation connection methods for module with split J-Box are as follows (The extension cable is required).

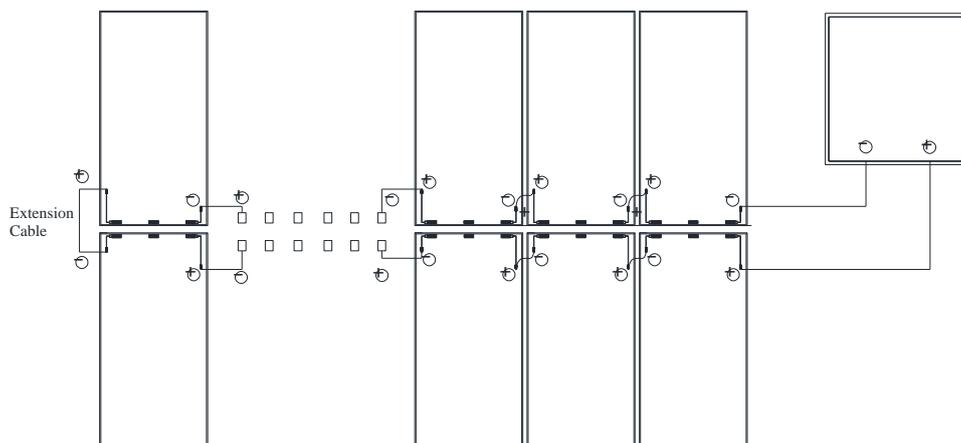

**Fig. 9-1 Split J-Box at module side position for vertical direction**

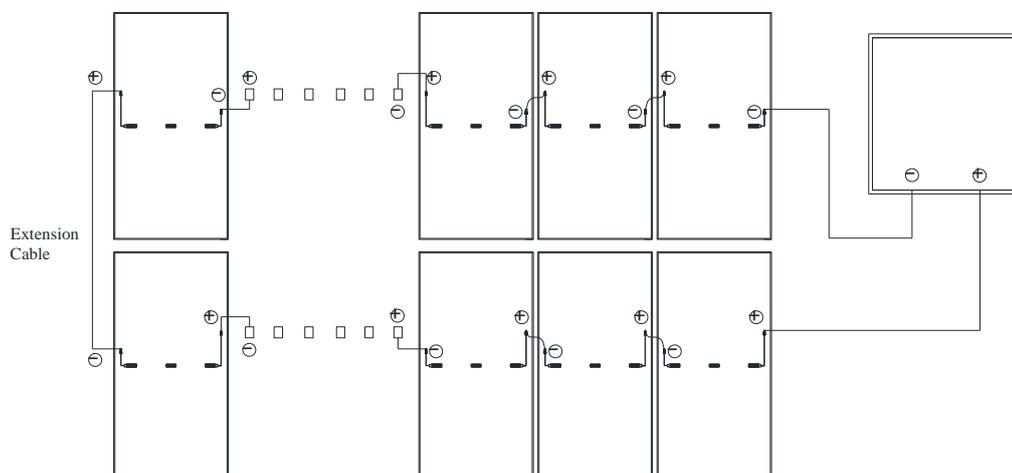

**Fig. 9-2 Split J-Box at module middle position for vertical direction**

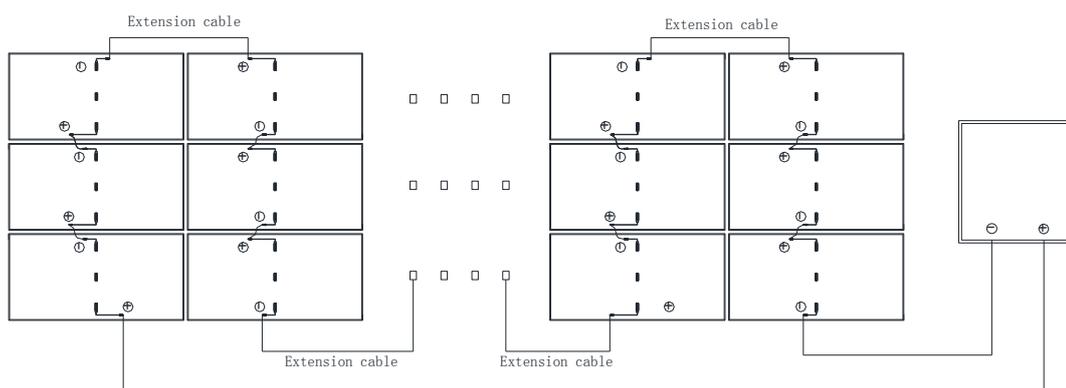


**Fig. 9-3 Split J-Box at module middle position for horizontal direction**


**Precautions:** Pay attention to the direction of the wire when installing the modules. It should be connected along the wire direction to avoid bending the wire.

## 10 Electrical Connection


- The Direct Current (DC) generated by the PV system can be converted to Alternating Current (AC) and connected to the public power grid. Different regions may have different policies, laws and regulations to stipulate the installation and grid-connection requirements of PV systems. Therefore, during the design, installation and grid-connection of PV system, please comply with the local policies, laws and regulations.
- PV modules can obtain different current and voltage outputs through series connection and parallel connection. Read this installation manual carefully before electrical connection and installation. Please design and connect according to the current and voltage required by customers. Before connection, please ensure that the connection part is free from corrosion, and keep it clean and dry.
- In order to ensure the normal running of the system, when connecting modules or loads, please ensure that the polarity of the cable connection is correct. If the modules are incorrectly connected, the bypass diodes and junction boxes may be damaged. PV modules can be connected in series (Fig. 9-1), in parallel (Fig. 9-2) and in series-parallel (Fig. 9-3). The number of serial or parallel connections shall be reasonably designed according to the system configuration. Also note that if the number of parallel connections  $\geq 2$ , there must be an over-current protection device on each string assembly.

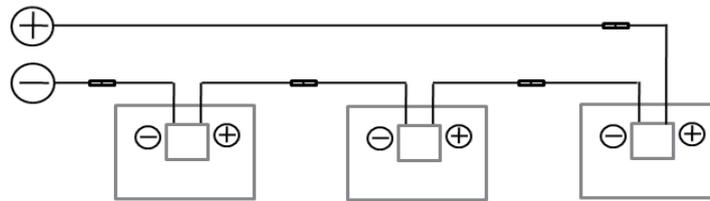

**Fig. 9-1 Series Connection**

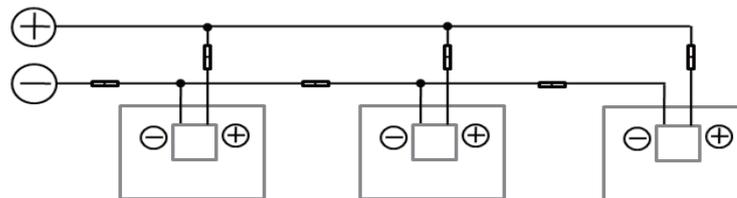

**Fig. 9-2 Parallel Connection**

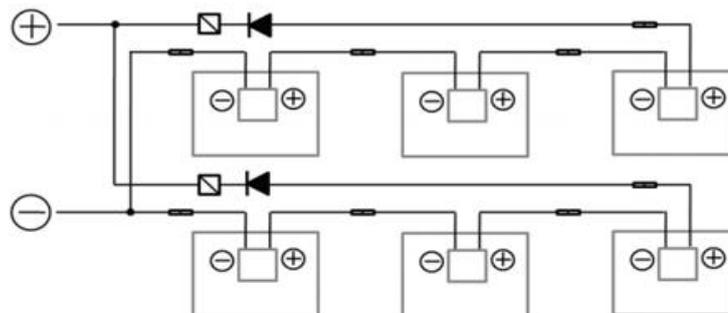

**Fig. 9-3 Parallel-series Connection**

- Different types of modules cannot be connected in series. Modules connected in series should ensure the consistency of their current. The voltage of the module string should not exceed the allowable system voltage value, which can be found on the nameplate or datasheet of the module.
- The maximum number of modules in series depends on the system design, the type of converter used and the environmental conditions. In general, the maximum number (N) of PV modules in series can be calculated by dividing the maximum system voltage by the open circuit voltage of the relevant solar PV modules. When designing the solar PV system, it is necessary to take into account the characteristic that the voltage of the solar PV module changes with the temperature. Considering the voltage increase caused by temperature drop in extreme environment in winter, the maximum series connection number of solar PV modules can be calculated by the following formula.

**Table 9-1 maximum series connection number calculation**

<b>Formula</b>	Maximum system voltage $V \geq N \times V_{oc} \times [1 + \beta \times (T_{min} - 25)]$		
<b>V</b>	Maximum system voltage		
<b>N</b>	The number of maximum solar PV modules in series		
<b>V<sub>oc</sub></b>	The open circuit voltage of each module (see product label or data sheet)		
<b>β</b>	Temperature coefficient of open circuit voltage of the module (refer to data sheet)		
<b>T<sub>min</sub></b>	The lowest ambient temperature at installation site		
<b>60/120pcd 1000V Module</b>	The recommended maximum number of solar PV modules in series is N 22	<b>60/120pcd 1500V Module</b>	The maximum number of solar PV modules in series is recommended to be N 33
<b>72/144pcd 1000V Module</b>	The maximum number of solar PV modules in series is recommended to be N 18	<b>72/144pcd 1500V Module</b>	The recommended maximum number of solar PV modules in series is N 28

**Remarks:** if the number of parallel connections is greater than or equal to 2, there must be an over-current protection device on each string of modules.

- Product can be irreparably damaged if an array string is connected in reverse polarity to another. Always verify the voltage and polarity of each individual string before making a parallel connection. If you measure a reversed polarity or a difference of more than 10V between strings then check the string configuration before making the connection.
- Before wiring the module, ensure that the contact points are corrosion resistant, clean and dry; If a string of modules is reversed, irreparable damage can be caused
- For relatively large installations, nison recommends that you use lightning protection in accordance with local requirements and regulations.
- Each Risen solar PV module has two PV cables which can withstand 90°C temperature and they are sunlight resistant(UV). The cross-sectional area of the cable is 4mm<sup>2</sup> or 12AWG, and the external diameter is 4mm-7mm. Plug & Play connectors are included at the end of each cable. All other cables used to connect the direct current system shall have similar (or higher) specifications, and should have the suitable insulation ability which can suffer the possible maximum system Voc ( as defined in TUV 2PfG1169 or EN50618 (H1Z2Z2-K)). Risen requires all cables and electrical connections to comply with the electrical regulations of the countries where the PV system is installed.

- When selecting a cable, the minimum current-carrying capacity of the cable can be calculated by the following formula.

Minimum current-carrying capacity of the cable =  $1.25 \times I_{sc} \times N_p$

$I_{sc}$ : short-circuit current of PV module (unit: A)

$N_p$ : the number of modules in parallel or module strings

- To clear or trim excess cables and Risen recommends that all cables be placed in proper pipework and away from standing water.
- Risen recommends using lightning protection devices which are complied with local laws and electrical regulations

## 10.1 Bypass secondary

- If solar photovoltaic module part by shadow block, which can lead to reverse voltage related to solar cells, solar photovoltaic modules in other unaffected battery string or other solar PV modules in the system and current will force through keep out part of the power loss and heat affected cells. When the solar photovoltaic module is connected in parallel with the bypass diode, the current in the system will flow directly through the diode, so as to bypass the blocked part of the solar photovoltaic module and minimize the heating degree and power consumption of the solar photovoltaic module.
- Each module has three diodes. Each module has three diodes. Diode model, such as 15 qs045/20 sq045 / SBRB2045S SMBRB3045S /GF2045MG /SBRB3050TS /MSB3050T3A/MSB3050T3B (Twinsel PV junction box - SY001 / PV - SY005 / PV - SY015 / PV - RS006 / PV - SY017). Please do not try to open the junction box to replace the diode, or even when the diode problem, please do this work by professionals

## 11 Grounding

- All PV module frames and mounting brackets must be properly grounded in accordance with the applicable national electrical code.
- Correct grounding is achieved by continuously connecting the PV module frame and all metal modules together using the appropriate grounding conductor. The grounding wire may be

copper, copper alloy or other materials that can be used as conductors and meet the requirements of the national electrical code. It is recommended to use the copper wire (4-14 mm<sup>2</sup> or AWG 6- 12) as the grounding wire. The signal “” can be found at the grounding hole position. The ground wire must also be connected to ground through a suitable ground electrode. The tight connection of all the joint point should be ensured.

- On a grounding hole with a diameter of  $\phi 4$  mm, use a separate grounding wire and related accessories to connect the aluminum frame of the solar PV module and connect the grounding wire to the ground. The grounding uses the M4 x 12mm bolts and M4 nuts, star washers and plain washers, this ensures that the modules are firmly grounded. You can find the corresponding product drawing in module datasheet to know the detailed number, size and position of the grounding holes, The torque applied to ground fixation is 4N· m~8N ·m.

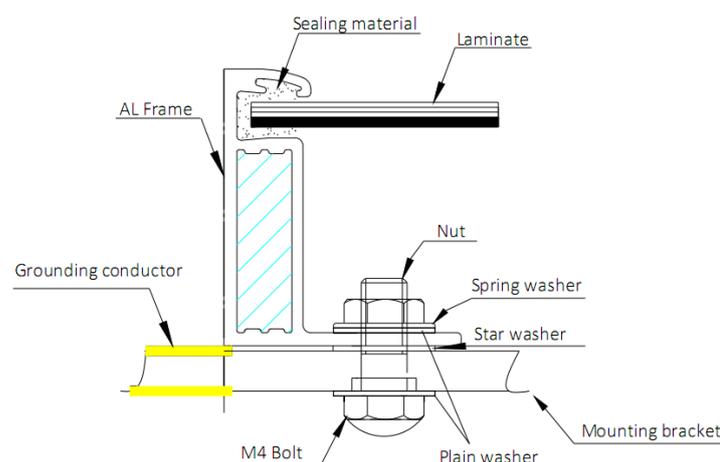


Fig. 10-1 Grounding

When grounding, each module can be grounded directly or in series or in parallel. If you choose the latter two options, it is recommended that the maximum number of modules connected in parallel should not exceed four, and in series should not exceed eight.

In addition to use the grounding hole, you can also choose the following grounding ways:

- ✓ Grounding by unused mounting holes
- ✓ Other professional grounding devices

The electrical contact points of all the above grounding methods should penetrate the

anodized film of the aluminum frame. Risen modules can be grounded by other grounding devices, which must be reliable and certified. The manufacturer's requirements should be followed.

## 12 Inspection and Maintenance

In order to ensure the long-term using of the installed PV system and maximize the Power output performance of the modules, the installed PV modules need to be inspected and maintained regularly. The inspection and maintenance of modules in the PV array shall be carried out by personnel who have received professional PV system maintenance training and obtained relevant qualifications and authorization.

### 12.1 Module visual inspection and replacement

- The PV modules installed in the PV array should be inspected periodically for damage. If functional and safety faults are found due to the following factors, the modules of the same type should be replaced immediately.
  - ✓ PV modules have broken glass, scratched back sheet.
  - ✓ Bubbles or delamination form a continuous path between electric circuit and the edge of the module.
  - ✓ Junction box is deformed, cracked or burned, and the terminals cannot be connected well.
- Replace failed PV modules with same type. Do not touch live wires and connectors directly. When you need to touch them, use suitable safety devices (insulation tools/gloves, etc.).
- The warning signs on the PV modules must not be lost.
- Check the electrical, grounding and mechanical connections every 6 months to ensure they are clean and safe, free from damage or rust. Check that the mounting parts are tight. Check all cables and make sure that the connectors are securely. PV modules frames and bracket should be well mechanically connected.
- Check whether there is any foreign body on the surface of the PV modules and whether there is any shielding.
- When repairing PV modules, cover the surface of PV modules with opaque material to prevent electric shock. Exposure of PV modules to sunlight will generate high voltages, this is

dangerous. Please pay attention to safety when maintenance and it must be done by professionals.

- When the irradiance is no less than  $200\text{W}/\text{m}^2$ , if the terminal voltage is more than 5% different than the rated value, it illustrates the connection of the modules is not good.
- Comply with maintenance instructions for all modules used in the PV system, such as brackets, charging rectifiers, inverters, batteries, lightning protection systems, etc.
- Warning: Any electrical maintenance must shut down the PV system firstly. Improper system maintenance may cause fatal dangers such as electric shock and burning.

## 12.2 Cleaning

Dust accumulation on the glass surface of the module will reduce its power output and may cause hot spots. So the surface of photovoltaic modules should be kept clean. Maintenance work should be performed at least once a year or frequently.

Warning: It should be carried out by trained personnel. Workers should wear PPE, such as goggles, electric insulation gloves and safety shoes. The gloves should withstand DC voltages of no less than 2000V.

- Use dry or wet soft cloths, sponges, etc. to clean the modules during the cleaning process, but do not put any modules directly into the water, do not use corrosive solvents and do not wipe the PV modules with hard objects. When the pressure water is used, the water pressure on the glass surface of the module must not exceed 700 KPa. The module must not be subjected to additional external force. If necessary, use isopropyl alcohol (IPA) according to the safety instructions to clean and ensure that no IPA flows into the gap between the edge of the module and the module frame.
- Clean PV modules when the irradiance is below  $200\text{W}/\text{m}^2$ . Liquid with a large temperature difference compared to modules shall not be used for cleaning. For example, do not use cold water to clean the module when the temperature of it is high during the day, otherwise there will be the risk of module damage.
- It is forbidden to clean photovoltaic modules under weather conditions with heavy rain, heavy snow or winds greater than class 4.

- The back surface of the module normally does not need to be cleaned, but in the event this is deemed necessary, avoid the use of any sharp objects that might damage or penetrating the substrate material.
- Water requirements when cleaning:
  - ✓ PH: 5~7
  - ✓ Chloride or salt content: 0 - 3,000 mg/L
  - ✓ Turbidity: 0-30 NTU
  - ✓ Conductivity: 1500~3000  $\mu$ s/cm
  - ✓ Total dissolved solids:  $\leq$ 1000 mg/L
  - ✓ Water hardness: 0-40 mg/L
  - ✓ Non-alkaline water must be used, and softened water can be used when conditions permitted.
- **Module inspection after cleaning**
  - ✓ Visual inspection to check if the module is clean, bright and free of stains;
  - ✓ Spot check to verify whether there is soot deposit on the module surface;
  - ✓ Check to whether there are visible scratches on the surface of the module or not;
  - ✓ Check whether there is no man-made cracks on the module surface or not;
  - ✓ Check whether the module support structure is leaning or bent or not;
  - ✓ Check whether the connectors of the module are detached or not;
  - ✓ After cleaning, fill out the PV module cleaning record.

### 13 Troubleshooting

If the PV system does not work properly, please inform your installer immediately. It is recommended to perform a preventive inspection every six months, please don't change any modules of the modules. If electrical or mechanical properties are required for inspection or maintenance, qualified professionals should be advised to avoid any electric shock or loss of life.

## 14 DISCLAIMER

Risen is not responsible for any form of damage, including but not limited to module operation and system installation error, and personnel injury, hurt, and property loss resulted from failure to follow the instructions in this Manual.

Failure of the customer to follow the requirements outlined in this Manual during the installation of the module will result in the invalidity of product's limited warranty.

Risen is not responsible for any infringement of third party patents or any other rights arising from the use of solar PV modules.

Risen reserves the rights to change this Manual without prior notice.

The information in this Manual is derived from knowledge and experience, and such information and recommendations do not constitute any warranty.

***This Manual is available in electronic form only. Please call our customer service hotline (400-8291-000) if you need a hard copy. In case of any discrepancy between the Chinese and English versions of this Manual, the Chinese version shall prevail. Risen reserves the rights to interpret this Manual.***